

# BUTANE LIGHTER CARE INSTRUCTIONS

**PLEASE READ INSTRUCTIONS BEFORE USING YOUR LIGHTER!**

KEEP OUT OF REACH OF CHILDREN.  
KEEP AWAY FROM ALL OPEN FLAME SOURCES.

- DO NOT ATTEMPT TO IGNITE LIGHTER WHILE REFILLING.
- ENSURE THAT FLAME IS EXTINGUISHED BEFORE ATTEMPTING TO FILL.
- LIGHTER CONTAINS FLAMMABLE GAS UNDER PRESSURE. HANDLE CAREFULLY.
- READ BUTANE CANISTER WARNING LABELS.

## **FILLING OR RE-FILLING YOUR LIGHTER**

TO FILL USE PREMIUM BUTANE GAS REFILL.

LOWER QUALITY BUTANE HAS BEEN KNOWN TO CLOG LIGHTERS.

1. RELEASE ALL TANK PRESSURE BY PRESSING ON THE INLET VALVE WITH A SMALL SCREWDRIVER.  
HOLD THE LIGHTER VERTICAL WHILE BLEEDING VALVE.  
REPEAT THIS SEVERAL TIMES UNTIL ALL FUEL/GAS PRESSURE IS RELEASED.
  2. SET FLAME ADJUSTMENT TO LOWEST SETTING.
  3. TURN LIGHTER IN UPSIDE DOWN POSITION AND INSERT BUTANE TANK TIP DIRECTLY ON THE FUEL VALVE.  
PRESS DOWN FIRMLY FOR ABOUT 5 SECONDS.
  4. BEFORE IGNITING LIGHTER, WAIT 3-4 MINUTES. THIS ALLOWS EXCESS BUTANE TO EVAPORATE AND GAS INSIDE LIGHTER TO REACH ROOM TEMPERATURE.
  5. SET FLAME LEVEL TO DESIRED HEIGHT BY TURNING FLAME ADJUSTER WHEEL.
- ONLY REFILL LIGHTER IN A WELL-VENTILATED AREA.
  - HOLD LIGHTER AWAY FROM FACE AND CLOTHING WHILE FILLING LIGHTER.
  - NEVER FILL LIGHTER AROUND ANY HEAT SOURCE, SPARKS OR FLAME.

## **IGNITING THE LIGHTER**

- A SIMPLE PUSH ON THE IGNITION SWITCH IGNITES A POWERFUL WINDPROOF FLAME OVER 2,000 DEGREES. THIS FLAME CAN BE NEARLY INVISIBLE IN BRIGHT LIGHT, SO PROPER CARE IS RECOMMENDED.

## **TAKE CARE NOT TO TOUCH THE LIGHTER TOP AFTER IGNITION.**

- TO AVOID HEAT BUILD UP, DO NOT USE IN ANY SITUATION THAT WOULD REQUIRE A CONTINUOUS FLAME FOR MORE THAN 10 SECONDS. THE LIGHTER MAY BECOME TOO HOT AND CAUSE HARM TO THE LIGHTER AND/OR THE USER.

## **EXTINGUISHING THE FLAME**

- RELEASING PRESSURE FROM THE IGNITION BUTTON OF THE LIGHTER IMMEDIATELY EXTINGUISHES THE FLAME BY STOPPING FUEL FLOW.
- IF FLAME CONTINUES, THE FLAME LEVEL IS SET TOO HIGH AND SHOULD BE ADJUSTED BY TURNING THE ADJUSTMENT WHEEL ON THE BOTTOM OF THE LIGHTER TOWARDS THE (-) POSITION.

## **ADJUSTING FLAME LEVEL**

- TURN THE FUEL ADJUSTMENT WHEEL ON THE BOTTOM OF THE LIGHTER TOWARDS THE (+) MARK TO INCREASE THE FLAME AND TURN THE WHEEL TOWARDS THE (-) TO DECREASE THE FLAME TO ACHIEVE A DESIRED HEIGHT.

## **CLEANING YOUR LIGHTER**

- OCCASIONALLY DUST AND OR LINT CAN CLOG THE IGNITION VALVE, CAUSING THE LIGHTER TO MALFUNCTION. TO CLEAR OBSTRUCTIONS SUCH AS THESE, BLOW A BURST OF AIR INTO THE IGNITION VALVE.



**WWW.CGARS.COM**